

RC 7462258
Blaine
Machine & Tools Ltd

BLAINE CURVED STAIRLIFT

FOR INDOOR USE





Introduction

The Baline Machine & Tools stairlift introduces a new generation of curved stairlifts into your home

Our curved stairlift is specifically designed to provide a safe, reliable, and comfortable solution for elderly individuals and those with mobility challenges, enabling them to navigate stairs with ease. With a focus on modern design, cutting-edge technology, and user-friendly features, our stairlift stands out in the market.



FOLDABLE ARMRESTS

The arms can be easily folded to minimize intrusion on the stairs. When the arms are folded up, the footplate automatically folds as well.

TOGGLE CONTROL

The toggle is very user-friendly; simply push it in the direction you want to travel.

POWERED SWIVEL SEAT

The powered swivel seat operates at both the top and bottom of the staircase, a feature not always available on other stairlift systems

POWERED FOOTREST

When the armrests are raised and lowered the footrest will automatically fold up and down. The Devi offers this convenient feature at no additional cost.

FAUX LEATHER SEAT

The seat is finished in an ethical faux leather which provides a soft and luxurious appearance to compliment any home. Available in two colours - sand or charcoal.


STAIRCASE TYPES

One of the most important aspects of stairlift installation is the rail. Your staircase will need either a straight or curved rail to install your stairlift.


At Stairlifts Today, one of our team will come and visit you, to give your staircase a comprehensive survey and assess which type of rail is suitable.

Although the stairlifts we supply have been designed to work with most staircases, sometimes installation of a stairlift will not be possible. If this is the case we will not sell you one - your safety comes before our sales figures. Whether you have straight or curved stairs, our rails are attached to the stairtread, and can be fitted to either side of the stairwell - depending on your survey results.

Straight Staircases

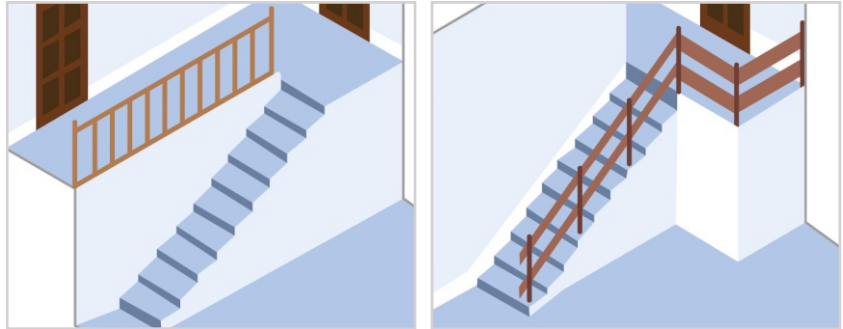

Curved Staircases

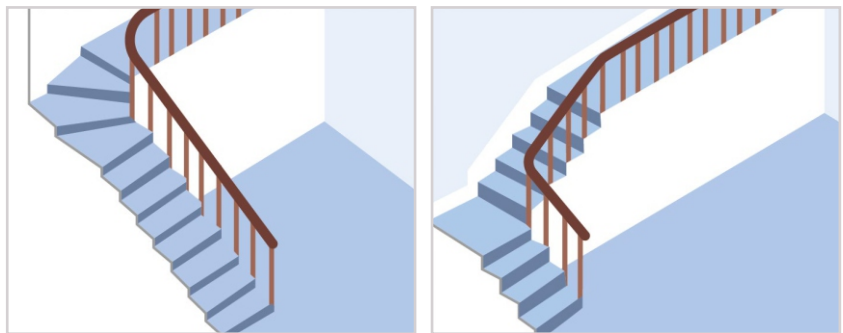

CHOOSING YOUR STAIRLIFT

Buying a stairlift is a big decision for anyone and there are many different types available. Here are some points to consider when making your decision.

Comfort & Support

This is one of the most important things you should look at. Make sure that you place comfort and support as a top priority and ensure that the user is happy with the choice. Whilst the time spent in the lift will be fairly short it should still provide support to the lumbar regions of the back to provide optimum levels of comfort.

Easy Operation

Stairlifts will be no good if the user cannot operate them and therefore, this needs to be considered. Always look at the control panel that is used and establish whether it is something which will be easy to understand. Manufacturers will always keep this in mind and you should have no trouble finding a model suitable to you.

Security & Stability

Lastly, make sure you are comfortable with your purchase by reviewing its safety and security levels. Check to see if there are any additional safety features which can be fitted. We will happily advise on each of these points, and all of your worries and concerns will be taken into consideration upon our suggestion.

We will happily advise on each of these points, and all of your worries and concerns will be taken into consideration upon our suggestion. We have a strictly no hard sell policy so we always take your safety and needs into consideration over making more money. Upon survey, we will be able to advise you on which stairlift will work best for you.



Product functions

Custom-Fit Design

- Tailored to fit any staircase, whether it's a spiral, narrow, or wide.
- Precision engineering ensures a smooth, quiet ride along the curved track.

Advanced Safety Mechanisms

- Electronic self-locking seat belt to prevent external sliding.
- Immediate operational halt if the seat belt is accidentally released.
- Durable 12V12AH lead-acid battery with 24V safe voltage operation, ensuring 2.5 to 3 hours of continuous use.

User-Friendly Technology

Voice broadcast and display screen at the armrest for real-time status updates. Fault code display and voice broadcast for easy troubleshooting. Wireless remote control and swipe card functionality for convenient access, even in high-rise buildings.

Eco-Friendly and Reliable

- Battery is recyclable and environmentally friendly.
- Designed with high safety standards, eliminating risks of spontaneous combustion or explosion.



Product functions

Safety sensing device

Our stairlift pedal, host, and rail are equipped with 15 safety sensing devices, including mechanical switches and infrared sensors for dual protection. If an obstacle is encountered, the stairlift will immediately stop. Once the obstacle is removed, simply restart the stairlift to resume operation.



Cross body style (standard)



Crossbody style (can be standard)

Product functions

Self-locking seat belt

The seat belt features an electronic self-locking mechanism, allowing it to be fully extended while instantly locking to prevent any external slippage. If it is accidentally released during use, the seat lifter will automatically cease operation to ensure your safety. This innovative technology has been certified with a national patent.

The safety belt should be used for extra security along the staircase. It neatly retracts away after use.



Product functions

Remote one click call

If your stairlift is not on the desired floor, you can use a wireless remote control or swipe card to call it. Even in a 10-story building, you can easily summon the stairlift, with multiple call modes available for your convenience. This feature has been certified with a national patent.



NO1
Wireless remote control signal reception

NO2
Device status display

NO3
Schematic diagram of shutdown
and fault location

NO4
Equipment usage status and fault codes

NO5
Number of device runs

NO6
Speed display

NO7
Equipment installation direction

Product functions

Voice announcements

The timing belt's voice broadcast, displayed on the screen at the armrest, allows you to easily monitor the running status. In the event of a stairlift malfunction, the display will show a unique fault code and simultaneously broadcast the issue via voice. You can then contact after-sales service personnel, who can remotely diagnose the problem, ensuring convenient after-sales support. This remote service is provided free of charge for life.

Product functions

Swivel folding seat

If you need to start with a step, or go up and down at the middle floor or end elevator exit position, the stairlift comes with a rotation function, which allows you to rotate the seat to a safe direction, making it easy and convenient. When not in use, the armrest, seat cushion, and footrest can be folded up for storage. After folding, the entire machine is only 39cm, which does not affect the normal passage of the corridor.





Product functions

Battery powered

The power supply uses a 12V12AH large capacity recyclable lead-acid battery, known for its high safety standards. It offers strong durability, endurance, and is safe and environmentally friendly, with no risk of spontaneous combustion or explosion. Operating at a safe voltage of 24V, it can last for 2.5 to 3 hours on a full charge, ensuring worry-free, continuous use by multiple people in high-rise buildings.



Target Market

Elderly Individuals

Seniors who wish to maintain independence in multi-level homes.

Elderly residents of high-rise buildings needing reliable stairlift solutions.

Caregivers and Family Members

Family members seeking safe and reliable mobility solutions for elderly loved ones.

Care facilities looking for advanced stairlift options for residents.

Healthcare and Assisted Living Facilities

Institutions requiring robust and user-friendly stairlift systems for patients and residents.

Architects and Builders

Professionals designing accessible homes and buildings with integrated mobility solutions.



Conclusion

Blaine Machine & Tool Limited's curved stairlift is a superior mobility solution, combining innovative technology with exceptional safety features. By targeting elderly individuals, caregivers, healthcare facilities, and industry professionals, and employing comprehensive marketing strategies, we aim to position our stairlift as the leading choice for those seeking reliable and user-friendly mobility solutions.



Blaine RC 7462258
Machine & Tools Ltd

F33 PHD Estate Yaba - Lagos.
Tel: 08023122943